This extra instruction sheet is designed to help users of any of the Grom BMW/Mini/Rover range


1. There are 3 different cables the may fit your BMW / Mini / Rover, please check you have the correct cable before commencing the installation.



BMW-T cable - This is connected into the BMW loom where the CD changer is/would be located. This is the only cable available if you have a Sat Nav head unit and you might find it in some BMW era Rovers. The 3 pin connector carries power and data, the 6 pin carries only sound.

BMW cable – Generally this cable connects behind the head unit on almost all models, unless you have the Sat Nav version in which case you require the BMW-T cable. Please make sure you disconnect your CD changer if present. Follow the instructions in the separate installation booklet and note the moulded 2x5 pin connector deals with sound. The most important wire is the bus wire, if nothing works please double check this.

Rover cable – BMW era Rovers generally require the ROVER cable, however on some models the BMW or BMW-T cable is used.

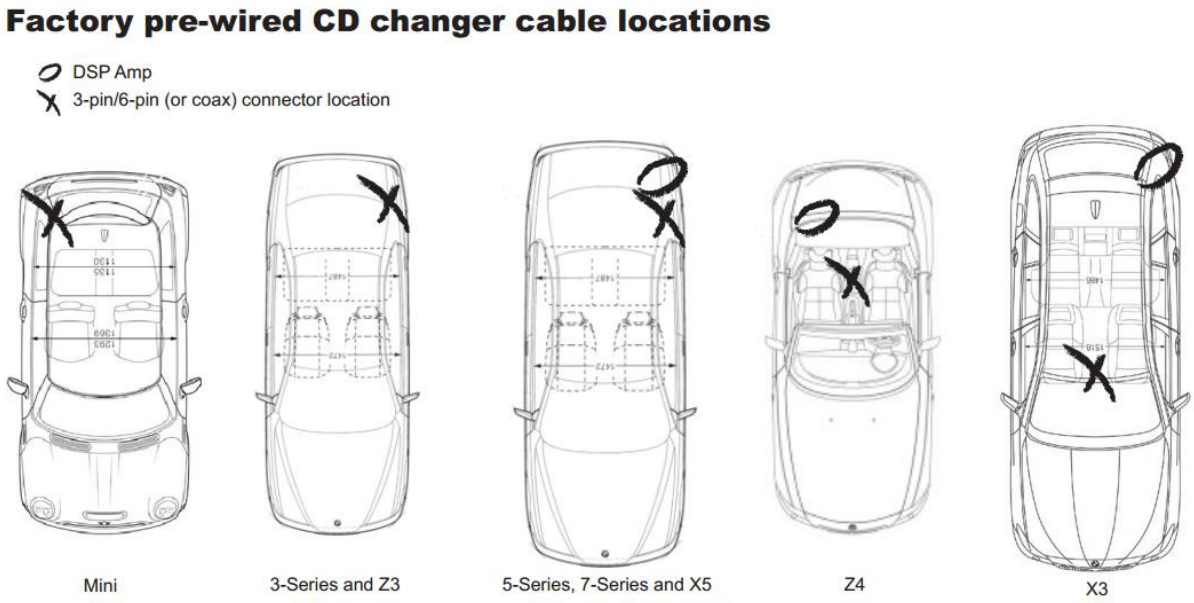

2. After the initial installation to get into Grom mode, generally pressing the 'MODE' button will allow you to select the external CD changer or in this case the Grom kit.
3. If the above has not worked, check power is going to the Grom unit. Either by opening the plastic case to see if the small LED is on (AUX, IPD3, BT3 only) or by connecting a device to the USB port (USB2P kit).